

OUTSIDE VIEW



# How to replace CAMEC door locks

## CAMEC SECURITY DOOR LOCK KIT

Make sure the parts kit supplied is correct for your hinged door.

Viewed from the outside of the caravan:

If hinge is on the left side of the door - door is **LEFT HINGE**.


If hinge is on the right side of the door - door is **RIGHT HINGE**.

OUTSIDE VIEW




### Parts Left Hinge Door Lock Kit

Strike  
014383

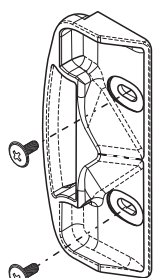


016752  
(M4 screws)

Remote Latch Assembly  
014386 - Left Hand

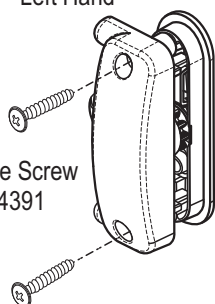

Plastite Screw  
014391


Strike  
014383

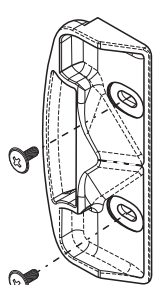


016752  
(M4 screws)

Plastite Screw  
014391

**MAIN LOCK**  
014384 - Left Hand

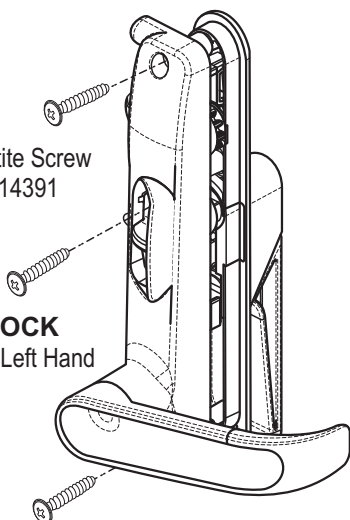


Strike  
014383

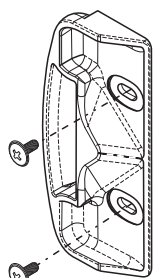

016752  
(M4 screws)

Remote Latch Assembly  
014386 - Left Hand

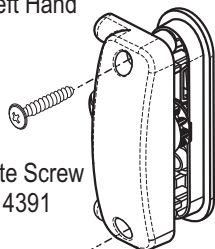


Plastite Screw  
014391



**A/BRE1/RX Barrel Assy & Keys**  
014392


### Parts Right Hinge Door Lock Kit

Remote Latch Assembly  
014387 - Right Hand

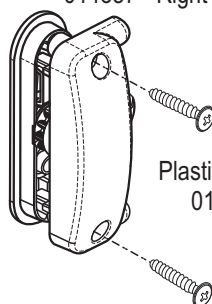


Plastite Screw  
014391

Strike  
014383

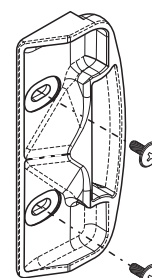


016752  
(M4 screws)

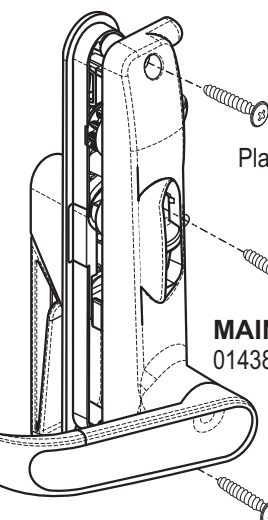

Plastite Screw  
014391


**MAIN LOCK**  
014385 - Right Hand

Strike  
014383

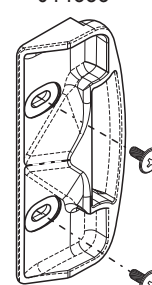

016752  
(M4 screws)

Remote Latch Assembly  
014387 - Right Hand

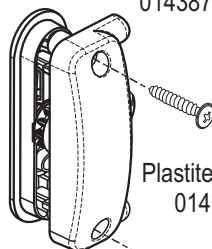


Plastite Screw  
014391



**A/BRE1/RX Barrel Assy & Keys**  
014392

Strike  
014383

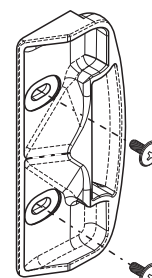

016752  
(M4 screws)

# How to replace CAMEC door locks

## SECURITY DOOR

Take Care! **Do not remove the lock and remote latches at the same time.** Make sure at least one lock or latch is installed on the door at any time. Otherwise the aluminium rack in the security door will fall down making the alignment of the rack/latch gear more difficult.

### Procedure to replace Lock.

1. Open the door and lift up Handle to separate Security door from the Main door.
2. Press Safety detent and slide locking snib down to expose the retaining screw. (refer to illustration A)

3. Undo retaining screws and remove main lock.
4. Install new inner main lock with locking snib down.

Use screwdriver to lift drive block and make sure latch gear engages with the rack. (refer to illustration B)

5. Fit the key barrel in the outer main lock. Position the detent ball at the side of the lock, install Outer Main Lock on door. Hand tighten screws. Do not overtighten. Put locking snib into normal position and test handle for correct operation. (refer to illustration C)

### Procedure to replace Remote Latches.

1. Unscrew remote latches and remove remote latch. Install new remote latches in reverse order to removal and hand tighten screws. Do not overtighten. (refer to illustration D)
2. Test operation of the door.

