

FITTING INSTRUCTIONS

FOR USE WITH RV TANK SENDERS ONLY

Choose a position to place the water gauge where it is possible to feed the sender wiring loom through the wall cavity or cupboard to the gauge.

Using a 16mm hole saw, **carefully** drill a hole in the internal wall in the centre of where the gauge is to be fitted. Be careful not to drill into wall beams and existing wiring.

When fitting the multi gauge it may be necessary to cut a **rectangular** hole with a blade knife for the plugs to fit through.

Feed the wiring loom up through to the water gauge and connect the plug into the back of the gauge.

Remove peel off backing from the adhesive tabs provided and attach the gauge to the wall.

Fill the water tank and check the operation of the water gauge by pressing the test button. The red reserve light will illuminate when the water level drops below 1/4 full.

For battery replacement, use a small flat screwdriver and insert it into the slots located on both sides of the water gauge unit and lever the two halves apart. The battery is a 12 volt **A23** battery.

WARNING

DO NOT UNDER ANY CIRCUMSTANCES USE THIS WATER LEVEL INDICATOR IN FLAMMABLE LIQUIDS. THIS PRODUCT IS FOR USE IN WATER ONLY.

If you have any questions regarding this product, please call (08) 82613500.

MADE IN AUSTRALIA BY

R V ELECTRONICS PTY LTD

1 ARDTORNISH STREETHOLDEN HILL. SOUTH AUSTRALIA 5088

Phone 08 82613500 Fax 08 82613400

EMAIL rvelectronics@bigpond.com WEB www.rvelectronics.com.au