


ALL CLIMATE  
**DESIGNER SERIES**  
Tyvek RV

**PATCH/REINFORCEMENT MATERIAL**

**RV COVER**

Enclosed, please find the RV Cover Patch/Reinforcement Material.  
Instructions for application are as follows:

1. Clean the portion of the cover to which this material is to be applied.
2. Ensure this area is dry.
3. Trim the patch material to a circular shape with rounded corners.
4. If possible, apply the material when the outside temperature is 18 °C or above. It's not absolutely necessary, but will help with adhesion. If adhesion remains an issue, we recommend using spray glue or a clear silicon.
5. Apply the material to both the inside and outside the affected area.

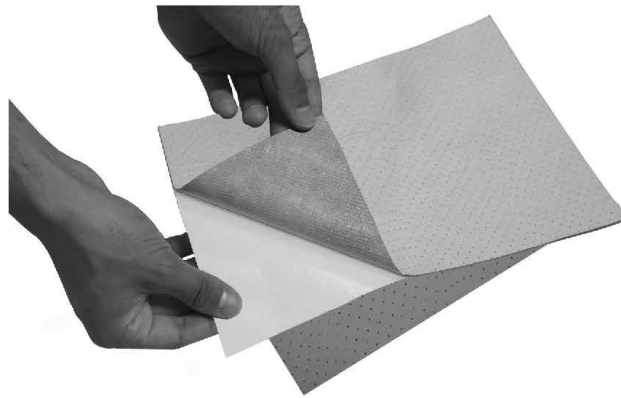

---

If you have any further questions, we encourage your first point of contact to be Coast to Coast RV Services at:

**AUSTRALIA**  
Web: [www.coastrv.com.au](http://www.coastrv.com.au)

**NEW ZEALAND**  
Web: [www.coastrv.co.nz](http://www.coastrv.co.nz)

