


## Installation instructions: SOG Toilet ventilator Type3000 A for Dometic CT 3000


Please read completely before installation

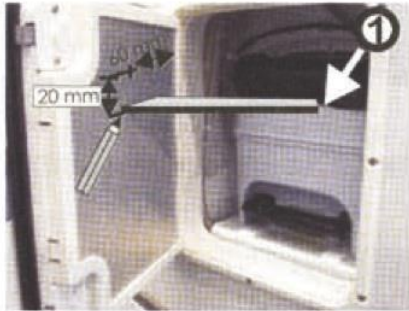

### Placement of the ventilator hole

Exact placing is only necessary when the waste holding tank is placed in the service space near the door, as is shown in the drawing, so the access door is able to close correctly. If more room is available, the ventilator can be placed a little higher.

For an exact location place a flat ruler horizontally on the waste holding tank, 1, and close the service door so that the ruler touches it and mark the position of the lower side with a pencil. Mark the point 20 mm (3/4") above this point and approximately 60 mm (2 3/8") inside the inside frame of the access door. Bore a hole 36 mm to 37 mm diameter (1.4 to 1.46") through The door using a cylindrical borer or milling cutter.

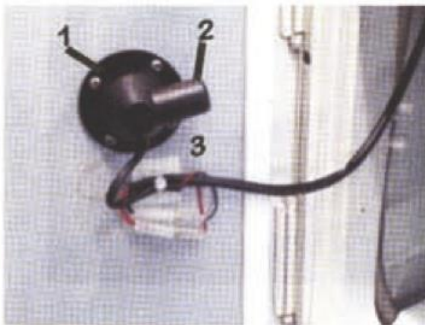

### Mounting the ventilator

As smells can leave the service space and enter the vehicle space, careful sealing is important.

Spread silicone paste inside the bored hole. If there are two layers of sheet metal, the space between them must also be sealed against smells. Mount ventilator, 1, hose connector, 2, must always point towards the door hinge. Mount the ventilator using the four 3.5x16 mm screws. Mount the 25x25 mm cable bracket, 3, above the ventilator to take up any tension in the cable.


### Installation of Filter Casing



Apply a line of silicon caulking to the back side of the filter casing around the fan discharge opening



The filter casing must be installed at least 5mm from the door frame. Hold 5 mm of flats between the door frame and the filter casing as an assembly support. Insert and tighten screws, 3.5 x 16 VA, without pre-drilling into aluminum sheet. Apply a line of silicon caulking to the back side of the filter casing around the fan discharge opening.

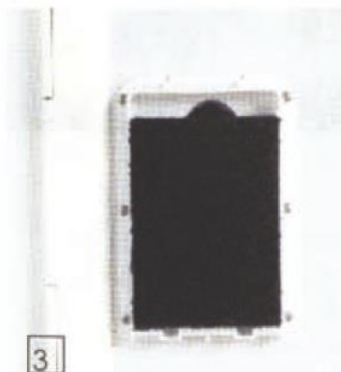

Insert filter into designated setting



Place cover plate on top. Pull lower section forward slightly. Push cover plate from top to bottom and snap into place. Insert screws and tighten slightly while pressing on cover plate.